


Section A-A

OPTIONAL: SECURE COVER TO BASE

R-SS4-BCFOAM (x2)



SS4c-hh-DCOVER-xx

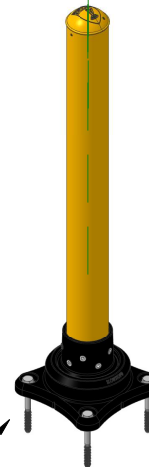

SS4Y-42

1. AFTER ASSEMBLING SLOWSTOP BOLLARD, PLACE FOAM RINGS OVER BOLLARD PIPE AS SHOWN.
2. PLACE COVER OVER FOAM RINGS AND PUSH DOWN COMPLETELY.
3. OPTION: SECURE BOLLARD COVER INTO BASE WITH SELF-DRILLING SCREW (NOT INCLUDED).



CONFIDENTIAL & PROPRIETARY

The drawing on this print and the information therewith are property of Impact Recovery Systems, Inc., and shall not be used or discussed in whole or in part without the consent of Impact Recovery Systems, Inc.

4955 STOUT DR. · SAN ANTONIO, TX 78219 · (800) 736-5256

SIZE  
**A**

PART NO.

DWG.

4" BOLLARD WITH 4" DOMED COVER

REV  
2.0

SCALE

IMPACT RECOVERY SYSTEMS, INC.

DATE 27-FEB-2024