


Section A-A

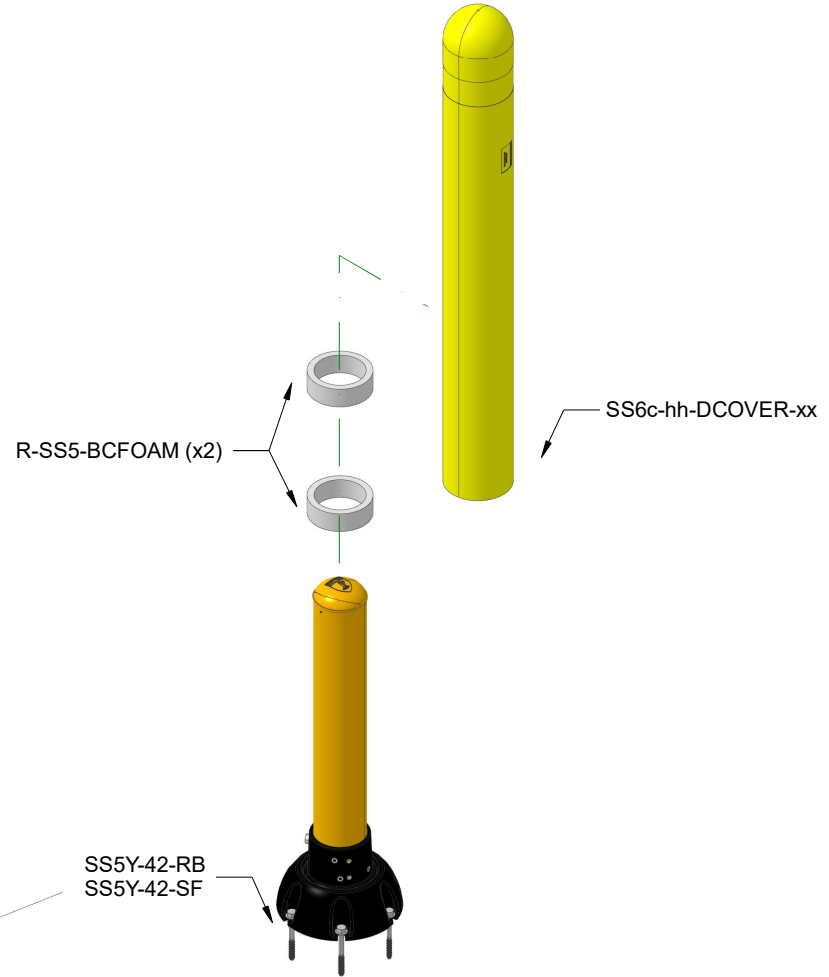

1. AFTER ASSEMBLING SLOWSTOP BOLLARD, PLACE FOAM RINGS OVER BOLLARD PIPE AS SHOWN.
2. PLACE COVER OVER FOAM RINGS AND PUSH DOWN COMPLETELY.
3. OPTION: SECURE BOLLARD COVER INTO BASE WITH HEX BOLT OR A SELF-DRILLING SCREW (NOT INCLUDED).



CONFIDENTIAL & PROPRIETARY

The drawing on this print and the information therewith are property of Impact Recovery Systems, Inc., and shall not be used or discussed in whole or in part without the consent of Impact Recovery Systems, Inc.

4955 STOUT DR. · SAN ANTONIO, TX 78219 · (800) 736-5256

SIZE A	PART NO.	DWG. 5" BOLLARD WITH 6" DOMED COVER	REV 2.0
SCALE	IMPACT RECOVERY SYSTEMS, INC.	DATE	27-FEB-2024